

DRAGONTOUCH

CLASSIC 15 PRO

DIGITAL PHOTO FRAME



USER MANUAL

V1.0

English 01 - 24

日本語 25 - 48

Welcome to Dragon Touch!

Dragon Touch digital frame is designed to collect & display thousands of your photos privately and safely. It's easy to get connected with all your loved ones around the world. This manual will provide details you need to set up your frame, invite families and friends to share photos with your new Dragon Touch frame. Let's get started!

Table of Contents

What's in the box-----	03
Your Classic 15 Pro-----	03
Getting Started-----	05
Uploading Photos and Videos to the Frame-----	07
1. Upload Photos and Videos Via VPhoto App-----	07
2. Upload Photos and Videos Via Email-----	11
3. Upload Photos and Videos Via USB Drive /TF Card-----	12
4. Upload Music Via USB Drive /TF Card-----	14
Key Features-----	15
1. Picture Slideshow-----	15
2. Video Slideshow-----	17
More Features-----	18
General Settings-----	19
Technical Specifications-----	22
Troubleshooting-----	23
Contact Us-----	24

What's in the Box



Classic 15 Pro



Stand



Power Adapter
with Cable




Quick Start Guide



User Manual

Your Classic 15 Pro



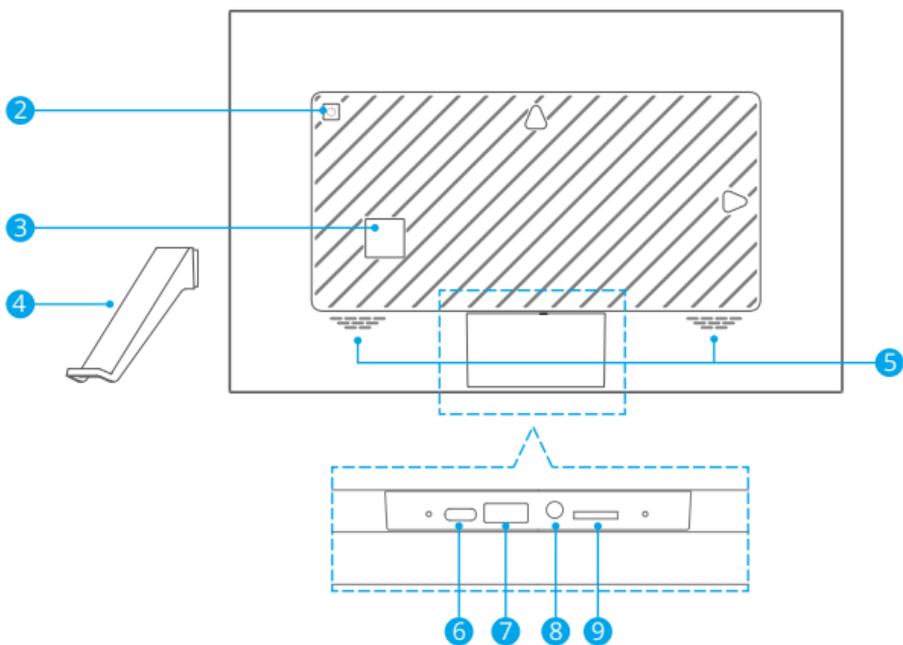


- ① 15.6"IPS Touch Screen
- ② Power Button
- ③ Stand Port
- ④ Stand
- ⑤ Speaker
- ⑥ USB-C/TYPE-C
- ⑦ USB-A Port
- ⑧ DC Power Port
- ⑨ Memory Card Slot

Getting Started


1. Install the stand

Screw in the frame stand on the back. You can place the frame either in landscape or portrait (we recommend you place it in landscape during the first setup). You can also mount the frame on the wall with the Wall Mount Hole on the back.

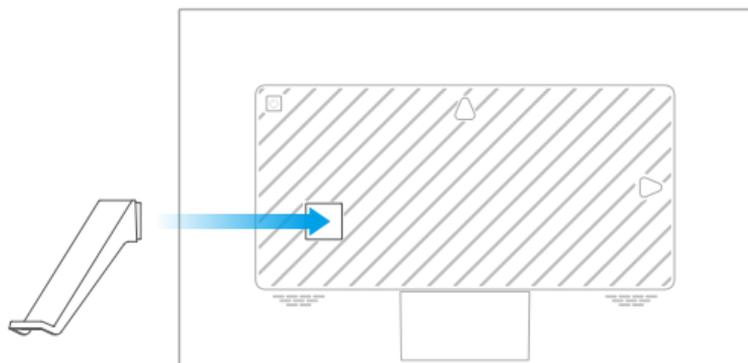

2. Power on

Connect the Power Cable to your frame and plug the Power Adapter into the wall socket, the frame will enter the system in seconds.

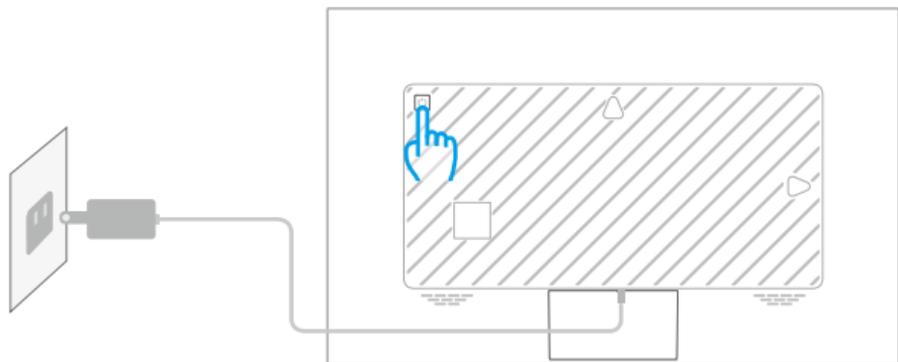

3. Plug in your frame

Connect the socket to the back of the photo frame, then plug it into a power source. The frame will power on in seconds. You can place the frame either in landscape or portrait mode (we recommend you place it in landscape mode during the first setup).

4. Initial Settings

There are several initial settings including Language, Wifi, Nickname, City, Timezone etc. when you enter the system for the first time.

5. Connect to Wifi

You can connect to Wifi during the initial settings or under the Wifi setting. Tap the Settings icon to enter the settings page, locate Wifi and tap on it to connect Wifi. Select the Wifi network you would like to connect and enter the password for connection. If your Wifi network is not on the list, move your frame closer to your router, wait for seconds and check it again.

Note:

- ① The photo frame supports 2.4GHz Wifi networks.
- ② A private Wifi network is highly recommended.

Uploading Photos and Videos to the Frame

1. Upload Photos and Videos Via the VPHOTO App



1.1 Download the Vphoto App

Please download and install the Vphoto app on your mobile device by searching Vphoto in the App Store or Google Play Or scanning the QR code below.



1.2 Create an Account

Open the Vphoto app, then set your user name and your profile photo.

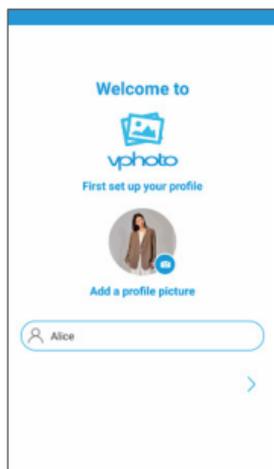
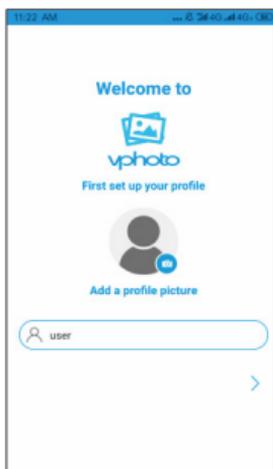


1.3 Pair Your Frame with the App

After completing the account setup process, you'll need to enter the connection code or scan the QR code of your frame. Once you've entered the connection code, you will see a pop-up message that says **"Bind success"**. This indicates that your account has been successfully linked to your frame and you're ready to start using it.

Note:

- ① The Connection code is a 9-digit serial number that is unique to your frame. You can find this code by accessing your frame's settings page and navigating to **"My Frame"**.
- ② The Connection code and QR code will refresh every 12 hours.
- ③ To view the connection code and QR code, you need to connect your frame to Wifi first. If you have not done so, the connection code and QR code will not load out.


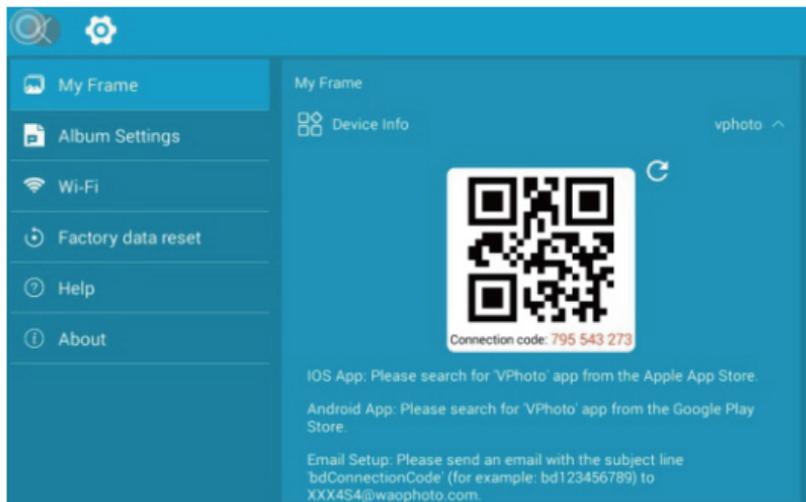
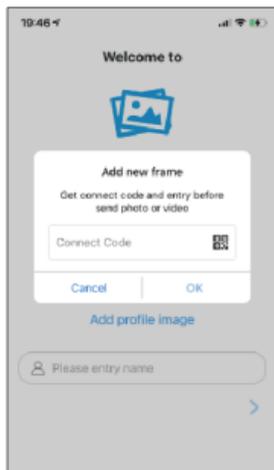


1.4 Upload Photos and Videos to Your Frame

After pairing the App with your frame, you can start adding photos and videos to your frame anywhere and anytime in the following two ways:

(1) Upload photos or videos from your phone's album.

First, select the photos or videos from your phone's album you would like to upload. Second, tap "Next" to choose the frame you would like to send them to. Last, tap the arrow icon in the upper right corner to send photos. Your photos or videos are successfully uploaded to your frame.

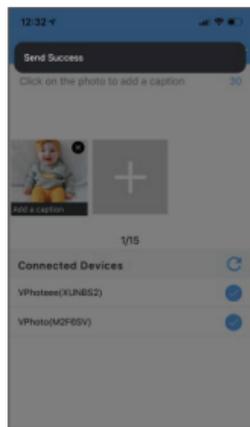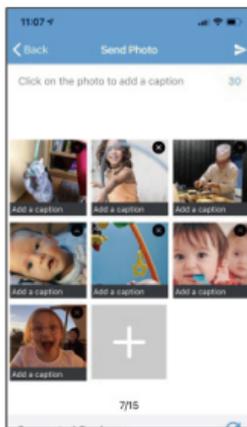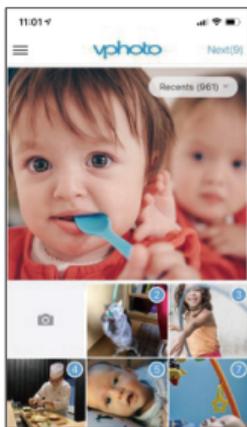

Warm tip:

- ① You can write captions for each photo before uploading. To do this, simply tap on the photo to add descriptions.
- ② You can't modify the title after uploading the photo to the frame.

(2) Upload new photos or videos.

First, tap the camera icon to take new photos or videos. Second, choose the frame you would like to send them to. Third, tap the arrow icon in the upper right corner to confirm. The photo frame will receive the photos or videos in seconds, you can check them on the frame's photo or video library.

Note:

- ① If the frame didn't receive the photos or videos, please reboot the product or check the Wifi network.

- ② Each video clip is limited to 200MB.
- ③ Videos can only be uploaded individually.

1.5 Invite Your Families & Friends to Connect to Your Frame

Your families and friends can share their happy moments to your frame by following the steps below:



- ① Download and install the Vphoto app.
- ② Open the app, then set user name and profile photo.
- ③ Get the connection code from you to connect to your frame. Please make sure your connection code is valid.
- ④ Start sending the photos and videos to your frame.

Here are two ways to share your connection code:

- 1) Take a screenshot of the connection code of your frame, then share it with your families or friends.
- 2) ① Open your Vphoto App, and tap the icon in the upper left corner.
 - ② Select "**Connected Frame**" from the menu.
 - ③ Choose the frame you want your friend to connect to, then tap the Share icon.
 - ④ You will receive a picture of the QR code and Connection code.
 - ⑤ Send it to your families or friends.

Note:

- ① The Connection code is a 9-digit serial number that is unique to your frame. You can find this code by accessing your frame's settings page and navigating to "**My Frame**".
- ② The Connection code and QR code will refresh every 12 hours.
- ③ To view the connection code and QR code, you need to connect your frame to Wifi first. If you have not done so, the connection code and QR code will not load out.

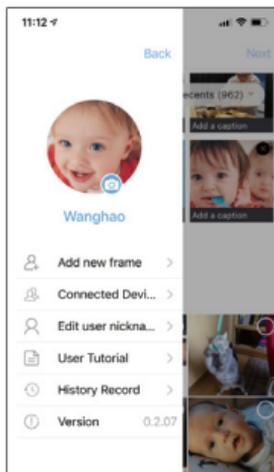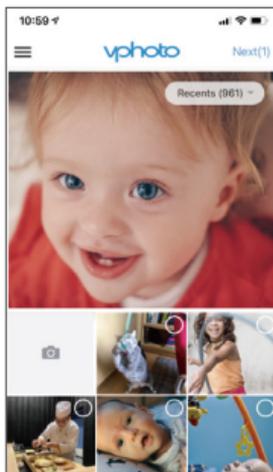



2. Upload Photos and Videos Via Email

You and your friends can also send photos and videos to the frame via Email.

2.1 Connect Your Email Address to the Frame

When the frame is on the settings screen, tap the "+" in "User Management", then add mailboxes. You or your friends will receive an email to inform your binding request is completed and the way to send photos and videos to the frame.

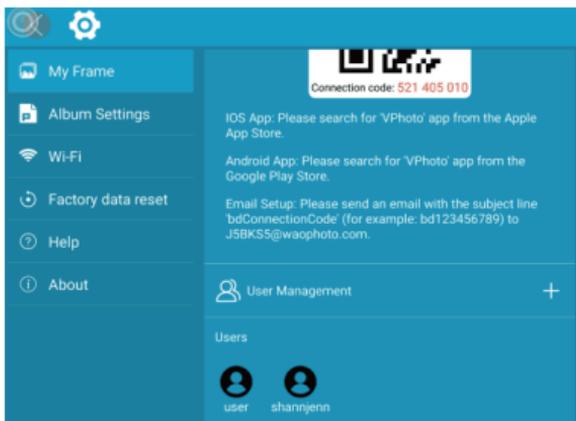

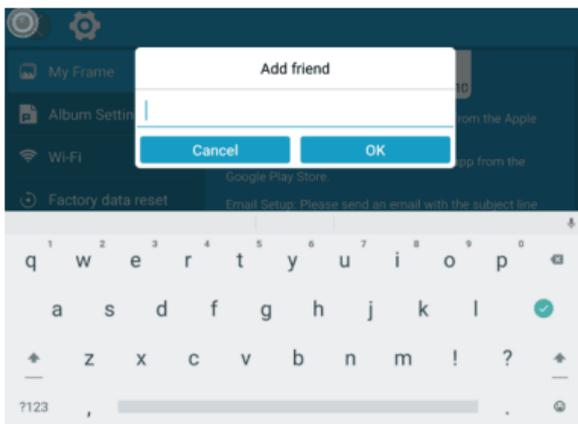

2.2 Upload Photos and Videos to Your Frame

After adding your email address to the frame, you can email photos and videos to the mailbox of the frame.

Your photos and videos will be received in minutes. You can check them on the frame's photo or video library. Each video clip is limited to 200MB.

3. Upload Photos and Videos Via USB Drive /TF Card



The frame can also support adding photos and videos via some external drives, such as USB drive and TF Card.

- (1) Insert a USB drive or a TF card into the frame, and wait for seconds, the frame will notify you when successfully connected.
- (2) Enter the Photo or Video library, and tap USB or TF Card, you will see all the photos or videos stored in the USB drive or the TF card.
- (3) Tap the More icon in the upper right corner, select the photos or videos you would like to copy to the internal memory of the frame.
- (4) Tap the Copy icon on the top then choose OK to import the photos or videos.

(5) Your photos or videos will be reserved in Internal Storage in seconds. You can check them on the frame's photo or video library.

Note:

- ① Max supports a 32GB TF Card.
- ② Please remove all your external devices when you reset the photo frame.
- ③ If you have too many files stored in the card, it will take more time to read.
- ④ Not all models support external drives. Please prevail in kind.
- ⑤ USB drive or TF Card supports the FAT32 format only.

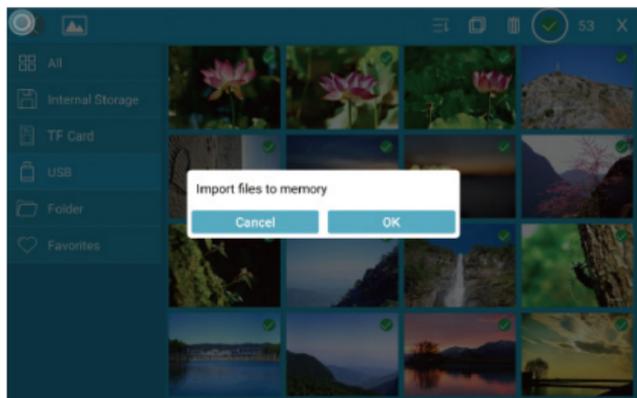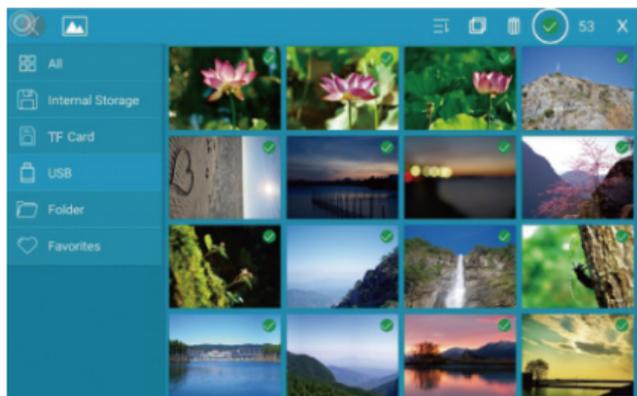

4. Upload Music Via USB Drive / TF Card

The frame can also support uploading music via external drive, such as USB drive and TF cards.

- (1) Insert a USB drive or a TF card into the frame, and wait for seconds, the frame will notify you when successfully connected.
- (2) Enter the Music, and tap "**USB**" or "**TF card**", you will see all the music stored in the USB drive or the TF card.
- (3) Tap the More icon in the upper right corner, select the music you would like to copy to the internal memory of the frame.
- (4) Tap the Copy icon on the top then choose OK to import the music.
- (5) Your music will be reserved in Internal Storage in seconds. You can check them on the frame's music library.


Key Features


1. Picture Slideshow

Tap any photo in the upper left corner of the Homepage to enter the photo library.

You will find options including All, Internal Storage, TF Card, USB, Folder, Favorites and user list. You can check all photos of each playlist and operate in batch.

- **"All"** includes photos in the internal storage and external devices. The default playlist is **"All"**. You also can choose photos in the Internal Storage to start slideshow.
- **"Internal Storage"** includes photos sent from the app, email, or copied from external devices.
- **"TF Card"/"USB"** shows photos in external drives like USB drive or TF cards. To add pictures to **"Internal Storage"** from **"TF Card"/"USB"**, you can tap **"!**" at the upper right corner, choose the photos you want to add to **"Internal Storage"**, then tap **"☑"** and **"OK"** to confirm the process.
- **"Folder"** allows you to create folders and name them. Only pictures in **"Internal Storage"** can be added.

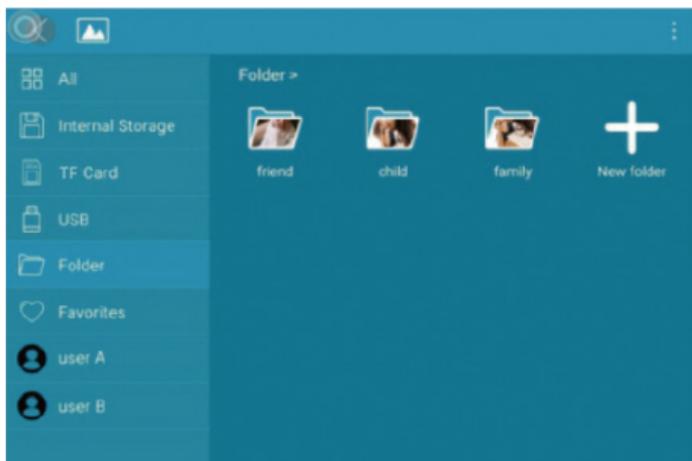

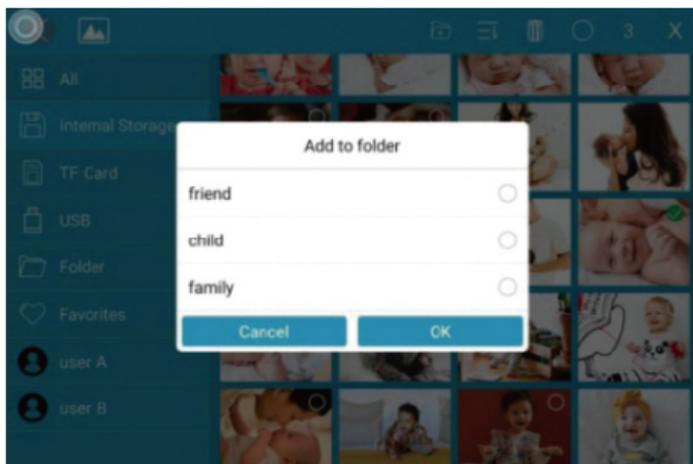



Note:

- ① Only pictures in **"Internal Storage"** can be added into folders and to Favorites.
- ② To delete some pictures, we highly recommend to operate in **"Internal Storage"** instead of **"ALL"**; Or please remove external device while deleting so as to avoid deleting files in **"USB"** or **"TF Card"** by mistake.
- ③ Not all models support external drives. Please prevail in kind.

During the slideshow, you will have more tools to customize the slideshow simply by touching the screen. There will be an operation column on the bottom.

The contents are as follows: Rotate, Full screen display, Pause, Delete, Zoom in, Setting, Information, Add to favorites, and Split screen display.

You can tap "♥" to add the picture to your **"Favorites"** and set multi-display for fun. You can adjust the slideshow transition effect and slideshow interval. You can also pause the slideshow to keep showing the current photo.

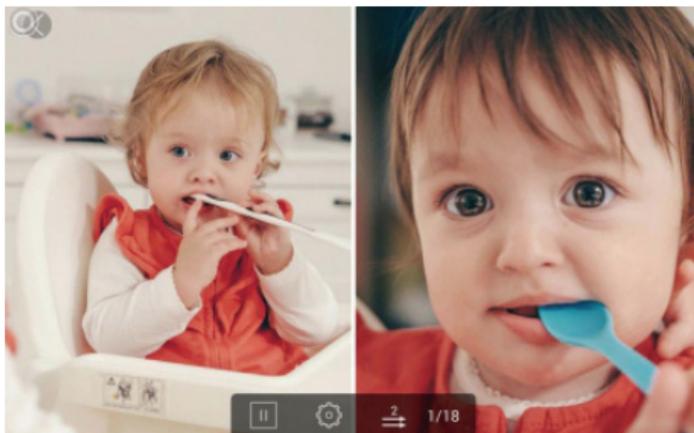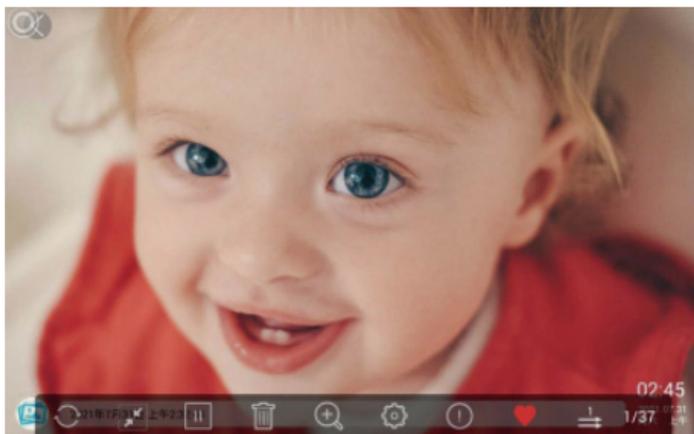

2. Video Slideshow

Tap "Video" on the Homepage to enter the video library, then select the video you want to play.

Note: Video clips shared from the app and email will show in the video library.

More Features

Music

Tap "**Music**" the Homepage to enter the music library, then select the music you want to play.

Weather Forecast

Choose "**Weather**" on homepage, you can check the weather of three days. Both [°C] and [°F] are available. You can switch to the temperature format you want to use. By tapping "+" in the upper left corner to add several cities, you can know the weather of the city you add.

Clock

Choose "**Clock**", you can choose the clock skin you like to present the time.

Steps: After entering the clock interface, double-click the screen.

Alarm

Choose "**Alarm**" to set up the alarm clock. Tap "**Add**" to add a new alarm clock and tap "**Edit**" to adjust the set time and delete the alarm clock you choose.

General Settings

My Frame

Shows your frame connection code and user management.

- The Connection code and QR code will refresh every 12 hours. You can also refresh the code manually by tapping .
- To nickname your frame, you can tap the frame name in the upper right corner to edit; it will show on the app after you connect it to the frame.
- To send photos and videos to your frame via email, you can simply tap "+" at "User Management" to add the email address. Please refer to "Upload Photos or Videos Via Email" for more details.

Please refer to "UPLOADING PHOTOS VIA EMAIL" for more details.

- "Users" allows you to manage the connected account of the frame. Tap the account name, you can view photos, remark names, delete users, or delete both users and photos.

Album Settings

• Brightness

Adjust the brightness of the screen.

• Sound

Adjust the media volume.

• Touch Sounds

Choose to turn the sound on or off when touching the screen.

• Assistive Touch

When Assistive Touch is enabled, the assistive touch will appear on the screen. It is a quick navigation key that helps you easily go to Homepage and adjust the volume.

- **Language**

English, Deutsch, Español, Français, Italiano, русский, 日本語, 简体中文 .
Set the system language.

- **Slideshow**

Set Slideshow time to make the frame automatically display photos after a period time of inactivity.

For example: when you set it to 5 seconds, the screen will automatically switch to the slideshow if there is no operation within 5 seconds.

- **Slideshow Mode**

Choose either Sequential or Random mode to display photos.

- **Sort by**

Choose the pictures to be sorted by time or name.

- **Caption**

When Caption is enabled, the captions you write will be displayed on the photo.

- **Date and Time**

Set the date and time according to your preference. You can select time zone and use network-provided time.

- **Sleep**

Set the Auto-On/Off time to make the display automatically turn on and off at a specific time.

- **Auto-rotate Screen**

When Auto-rotate screen is enabled, you can place the frame in portrait and landscape. The frame will adjust the picture automatically.

- **Notification Sounds**

Choose whether you want to be notified about new messages with sounds or not.

Wifi

Select the Wifi you want you frame to connect to.

Factory data reset

1. Tap **Factory data reset** to reset your frame.

Here are two ways to reset:

- 1) Choose "**Delete all users and restore the device to inactive**", device files will be reset and all boundusers will be unbound.
- 2) If you do not choose this option, only device files will be back to default settings and bound users remain.

2. Tap **OK** to reset your frame.

Help

Simple guide for you to share your pictures.

About

Tap "**About**" to check your frame's version, frame ID, serial number, etc. The frame version is of great help to troubleshooting. When you're asked to provide the frame version, you may find it here.

Technical Specifications

- **Adapter:** Input 100-240V 50/60HZ
- **Picture Format:** BMP, JPG, GIF, PNG
- **Audio Format:** Mp3, WMA, OGG, AAC, APE, FLAC, WAV
- **Video Format:** MPEG1, MPEG2, MPEG4, Xvid, AVI, M-JPEG, H.264, MOV, VOB, MKV, DIVX4, DIVX5, DIVX33GP
- **External support:** Max 32GB USB drive/TF Card
- **Wifi:** 2.4GHz Wifi network supported

Troubleshooting

1. Does the frame have to be plugged in all the time?

This frame needs to be plugged into a DC outlet all the time.

2. Why can't this frame connect to Wifi?

It supports 2.4GHz Wifi networks, select the Wifi network you would like to connect to and enter the password correctly if required. If your Wifi network is not on the list, restart your frame or move it closer to your router, wait for seconds and check it again.

3. Does this frame need to connect to Wifi to work or just in the setup process?

This frame needs to connect to a Wifi network for setup, receiving new photos or videos, user requests and for software updates. Otherwise, the frame can just play photos or video without a Wifi connection.

4. Why is there no sound from the frame?

Please check if the volume is turned down to 0 and if the player is in Mute mode.

5. Can I share photos and videos to the frame?

Yes, you can share both photos and videos (up to 200MB) to the frame.

6. Can I cycle pictures and videos together?

You could only play photos or videos separately.

7. Can this frame automatically turn on/off at a specific time?

You can go to the Sleep setting and set the auto on/off time as you want.

8. Why are there no files after sharing videos or pictures to cloud server?

Please check if the upload process is completed.

9. Why can't this frame play the file?

Please confirm if the file format is compatible with the frame.

10. Can I change the image transitions and display speed?

Yes, the speed can be adjusted in the bottom column when the picture is displaying.

Contact Us

 (888) 811-1140 (US)

 cs@dragontouch.com

 www.dragontouch.com

For any inquiries about Dragon Touch products, please feel free to contact us. We will respond within 24 hours.

ドラゴンタッチへようこそ！

ドラゴンタッチデジタルフォトフレームは、数千枚の写真をプライベートかつ安全に収集・表示するために設計されています。世界中の愛する人たちと簡単につながることができます。このマニュアルでは、フレームの設定や家族や友人に写真を共有する方法について詳細を提供します。さあ、始めましょう！

目次

箱の内容	27
あなたの Classic 15 Pro	27
開始手順	29
フォトフレームに写真や動画をアップロードする	30
1、VPHOTO アプリを使用して写真や動画をアップロードする	30
2、メール経由で写真や動画をアップロードする	35
3、USBドライブ/TFカード経由で写真や動画をアップロードする	36
4、USBドライブ/TFカード経由で音楽をアップロードする	37
主な特徴	39
1、写真スライドショー	39
2、動画スライドショー	41
複数の機能	42
一般設定	43
技術仕様	46
トラブルシューティング	47
お問い合わせ	48

箱の内容



Classic 15 Pro



スタンド



充電ケーブル付き
電源アダプター





クイックスタートガイド



ユーザーマニュアル

あなたの Classic 15 Pro

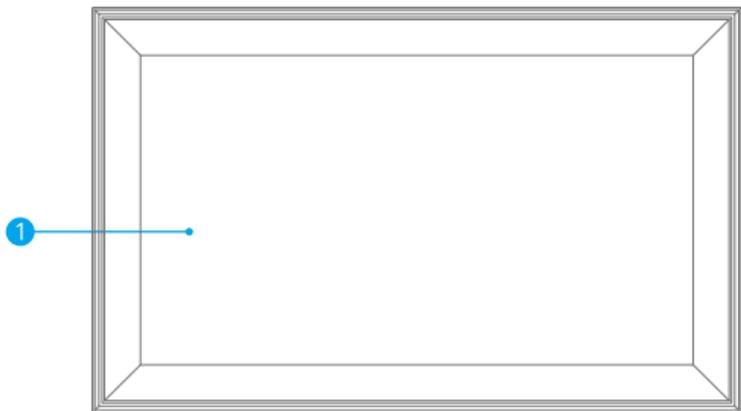

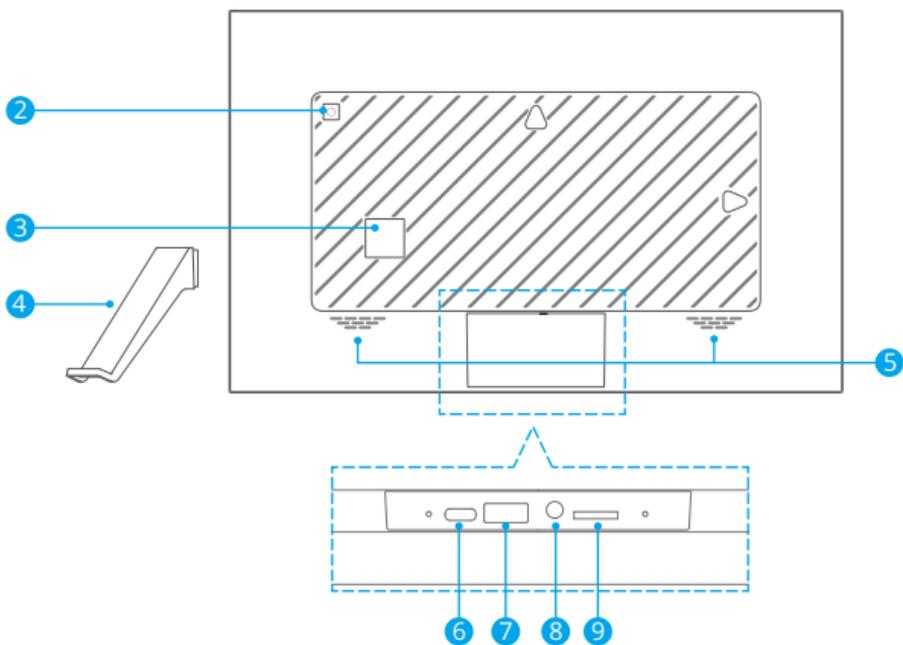


- ① 15.6インチIPSタッチスクリーン
- ② 電源ボタン
- ③ スタンドポート
- ④ スタンド
- ⑤ スピーカー
- ⑥ USB-C/TYPE-C
- ⑦ USB-A ポート
- ⑧ DC電源ポート
- ⑨ メモリーカードスロット

開始手順


1、スタンドを取り付ける

背面にフレームスタンドを取り付けます。フレームは横向きまたは縦向きのどちらでも配置できます(最初のセットアップでは横向きに配置することをお勧めします)。また、背面の壁掛け穴を使用してフレームを壁に取り付けることもできます。

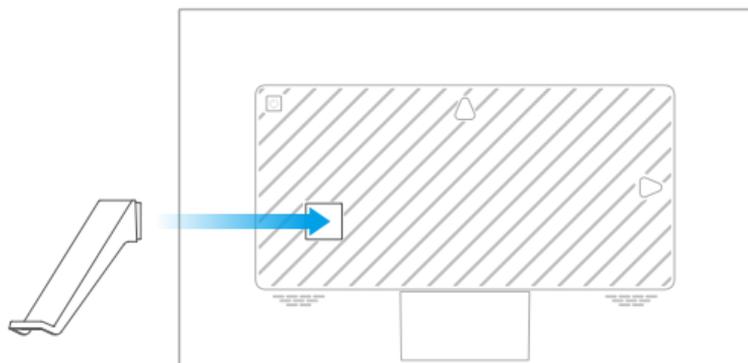

2、電源を入れる

電源ケーブルをフレームに接続し、電源アダプターをコンセントに差し込むと、フレームが数秒でシステムに入ります。

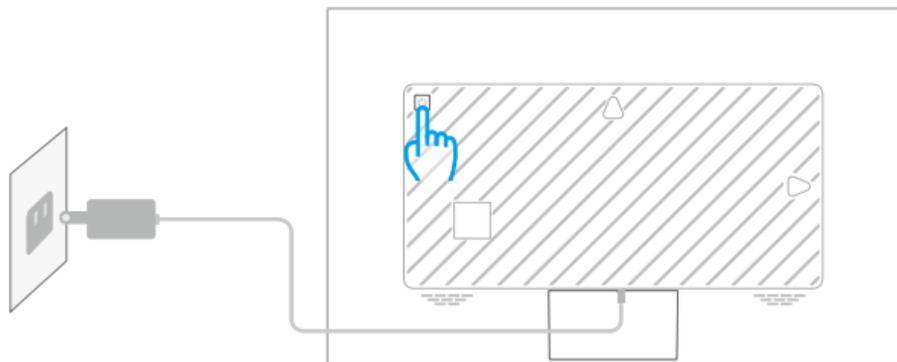

3、フレームに差し込む

ソケットをフォトフレームの背面に接続し、電源ソースに差し込みます。フレームは数秒で電源が入ります。フレームは横向きまたは縦向きのどちらでも配置できます（最初のセットアップでは横向きに配置することをお勧めします）。

4、初期設定

システムに初めて入るときに、言語、Wifi、ニックネーム、都市、タイムゾーンなどのいくつかの初期設定があります。

5、Wifiに接続する

初期設定中またはWifi設定の下でWifiに接続できます。設定アイコンをタップして設定ページに入り、Wifiを探してタップしてWifiに接続します。接続したいWifiネットワークを選択し、接続のためのパスワードを入力します。Wifiネットワークがリストにない場合は、フレームをルーターに近づけてから数秒待ってから再度確認してください。

注意：

- ① フォトフレームは2.4GHzのWifiネットワークをサポートしています。
- ② プライベートWifiネットワークの使用を強くお勧めします。

フォトフレームに写真や動画をアップロードする

1、VPHOTO アプリを使用して写真や動画をアップロードする

1.1 Vphotoアプリをダウンロードする

App StoreまたはGoogle PlayでVphotoを検索して、Vphotoアプリをモバイルデバイスにダウンロードしてインストールしてください。または、以下のQRコードをスキャンしてください。



1.2 アカウントを作成する

Vphotoアプリを開き、ユーザー名とプロフィール写真を設定してください。



1.3 アプリとフレームをペアリングする

アカウントの設定プロセスを完了した後、フレームの接続コードを入力するか、QRコードをスキャンする必要があります。接続コードを入力すると、「バインド成功」と表示されるポップアップメッセージが表示されます。これにより、アカウントがフレームに正常にリンクされ、使用準備が整いました。

注意：

- ① 接続コードは、フレーム固有の9桁のシリアル番号です。このコードは、フレームの設定ページにアクセスし、「マイフレーム」に移動して確認できます。
- ② 接続コードとQRコードは12時間ごとに更新されます。
- ③ 接続コードとQRコードを表示するには、まずフレームをWifiに接続する必要があります。接続していない場合、接続コードとQRコードは表示されません。



1.4 フレームに写真や動画をアップロードする

アプリとデジタルフレームをペアリングしたら、以下の2つの方法でいつでもどこでも写真やビデオをフレームに追加できます：

(1) 携帯電話のアルバムから写真や動画をアップロードする

まず、アップロードしたい写真や動画を携帯電話のアルバムから選択します。次に、「次へ」をタップして送信したいフレームを選択します。最後に、写真を送信するための右上の矢印アイコンをタップします。写真や動画はフレームに正常にアップロードされます。



注意：

- ① 写真をアップロードする前に、各写真にキャプションを書くことができます。これを行うには、写真をタップして説明を追加するだけです。
- ② 写真をフレームにアップロードした後、タイトルを変更することはできません。
- ③ 提供されたスクリーンショットは参考用です。

(2) 新しい写真や動画をアップロードする

まず、カメラアイコンをタップして新しい写真や動画を撮影します。次に、送信先のフレームを選択します。最後に、右上の矢印アイコンをタップして確認します。写真フレームは数秒で写真や動画を受信します。フレームの写真や動画ライブラリで確認できます。

注意：

- ① フレームが写真や動画を受信しない場合は、製品を再起動するか、Wifiネットワークを確認してください。
- ② 各ビデオクリップの制限は200MBです。
- ③ 動画は個別にのみアップロードできます。

1.5 家族や友人をフレームに接続するよう招待する

家族や友人は以下の手順に従って幸せな瞬間をフレームに共有できます。

- ① Vphotoアプリをダウンロードしてインストールします。
- ② アプリを開いて、ユーザー名とプロフィール写真を設定します。
- ③ フレームに接続するための接続コードを取得します。接続コードが有効であることを確認してください。
- ④ 写真や動画をフレームに送信を開始します。

こちらは接続コードを共有するための2つの方法です：

- 1) フレームの接続コードのスクリーンショットを撮影し、その後家族や友人と共有します。
- 2) ① Vphotoアプリを開き、左上隅のアイコンをタップします。
 - ② メニューから「接続されたフレーム」を選択します。
 - ③ フレンドが接続したいフレームを選択し、その後「共有」アイコンをタップします。QRコードと接続コードの写真が届きますので、それを家族や友人に送信します。

注意:

- ① 接続コードは、フレームに固有の9桁のシリアル番号です。このコードは、フレームの設定ページにアクセスし、「マイフレーム」に移動することで見つけることができます。
- ② 接続コードとQRコードは12時間ごとに更新されます。
- ③ 接続コードとQRコードを表示するには、まずフレームをWifiに接続する必要があります。接続していない場合は、接続コードとQRコードが読み込まれません。



2、メール経由で写真や動画をアップロードする

あなたとあなたの友人は、メール経由で写真や動画をフレームに送信することもできます。

2.1 メールアドレスをフレームに接続する

フレームが設定画面にあるとき、「ユーザー管理」の「+」をタップし、メールボックスを追加します。あなたやあなたの友人は、バインディングリクエストが完了したことで写真や動画をフレームに送信する方法についてのメールを受信します。





2.2 フレームに写真や動画をアップロードする

メールアドレスをフレームに追加した後、写真や動画をフレームのメールボックスに送信することができます。

写真や動画は数分で受信されます。フレームの写真や動画ライブラリで確認できます。各ビデオクリップの制限は200MBです。

3、USBドライブ/TFカード経由で写真や動画をアップロードする



フレームは、USBドライブやTFカードなどの外部ドライブを介して写真や動画を追加することもサポートしています。

- (1) USBドライブまたはTFカードをフレームに挿入し、数秒待って、接続が成功したときにフレームから通知があります。
- (2) 写真またはビデオライブラリに入り、USBまたはTFカードをタップすると、USBドライブまたはTFカードに保存されているすべての写真や動画が表示されます。
- (3) 右上隅の「その他」アイコンをタップし、フレームの内部メモリにコピーしたい写真や動画を選択します。
- (4) 上部の「コピー」アイコンをタップし、写真や動画をインポートするために「OK」を選択します。

(5) 写真や動画は数秒で内部ストレージに保存されます。フレームの写真や動画ライブラリで確認できます。

注意：

- ① 最大で32GBのTFカードをサポートしています。
- ② フォトフレームをリセットするには、すべての外部デバイスを取り外してください。
- ③ カードに保存されているファイルが多い場合、読み込みに時間がかかることがあります。
- ④ すべてのモデルが外部ドライブをサポートしているわけではありません。ご了承ください。
- ⑤ USBドライブまたはTFカードはFAT32形式のみをサポートしています。

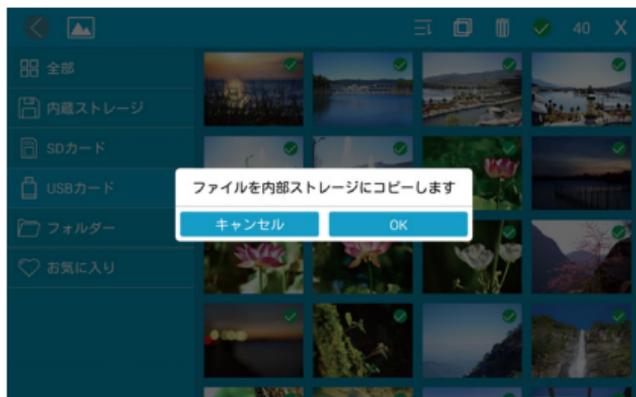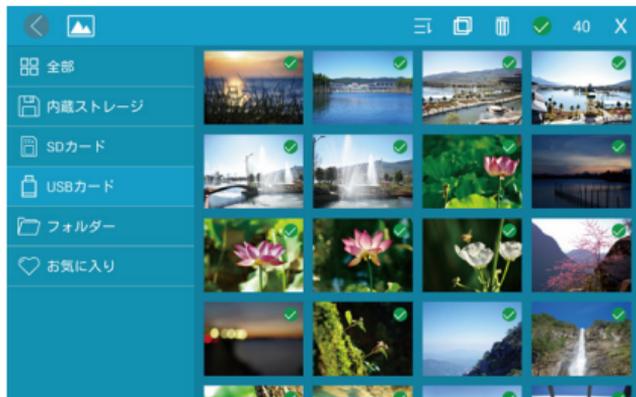

4、USBドライブ/TFカード経由で音楽をアップロードする

フレームは、USBドライブやTFカードなどの外部ドライブを介して音楽をアップロードすることもサポートしています。

- (1) USBドライブまたはTFカードをフレームに挿入し、数秒待って、接続が成功したときにフレームから通知があります。
- (2) 音楽に入り、USBまたはTFカードをタップすると、USBドライブまたはTFカードに保存されているすべての音楽が表示されます。
- (3) 右上隅の「その他」アイコンをタップし、フレームの内部メモリにコピーしたい音楽を選択します。
- (4) 上部の「コピー」アイコンをタップし、音楽をインポートするために「OK」を選択します。
- (5) 音楽は数秒で内部ストレージに保存されます。フレームの音楽ライブラリで確認できます。

主な特徴

1、写真スライドショー

ホームページの左上隅の写真をタップして写真ライブラリに入ります。

「全部」「内部ストレージ」「SDカード」「USB」「フォルダー」「お気に入り」「ユーザーリスト」といったオプションがあります。各プレイリストのすべての写真を確認し、一括で操作することができます。

- 「全て」には内部ストレージと外部デバイスの写真が含まれています。デフォルトのプレイリストは「全て」です。内部ストレージの写真を選択してスライドショーを開始することもできます。
- 「内部ストレージ」にはアプリから送信された写真やメールから送信された写真、外部デバイスからコピーされた写真が含まれます。
- 「SDカード」/「USB」はUSBドライブやTFカードなどの外部ドライブに保存された写真を表示します。「SDカード」/「USB」から「内部ストレージ」に写真を追加するには、右上隅のアイコン「+」をタップし、「内部ストレージ」に追加したい写真を選択し、「」アイコンと「OK」アイコンをタップしてプロセスを確認します。
- 「フォルダ」はフォルダを作成して名前を付けることができます。内部ストレージの写真のみが追加できます。






注意：

- ① 「内部ストレージ」にある写真のみがフォルダに追加され、お気に入りに追加されます。
- ② いくつかの写真を削除する場合は、「全部」ではなく「内部ストレージ」で操作することを強くお勧めします。また、削除する際は誤って「USB」や「TFカード」のファイルを削除しないように、外部デバイスを取り外すことをお勧めします。
- ③ すべてのモデルが外部ドライブをサポートしていません。ご了承ください。

スライドショー中には、画面にタッチするだけでスライドショーをカスタマイズするためのさらに多くのツールが利用できます。下部に操作カラムが表示されます。内容は次のとおりです：回転、全画面表示、一時停止、削除、ズームイン、設定、情報、お気に入りに追加、スリット画面表示。

「♡」をタップして写真を「お気に入り」に追加し、楽しいマルチディスプレイを設定することもできます。スライドショーの遷移効果と間隔を調整することもできます。また、現在の写真を表示し続けるためにスライドショーを一時停止することもできます。

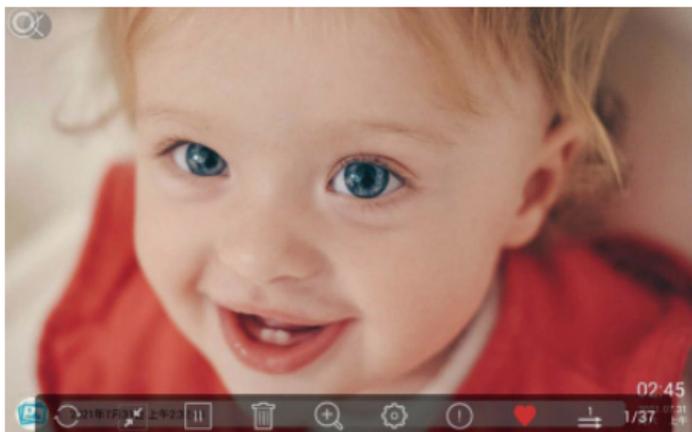

2、動画スライドショー

ホームページで「ビデオ」をタップして動画ライブラリに入り、再生したい動画を選択します。

注意：アプリやメールから共有された動画クリップは、動画ライブラリに表示されません。

複数の機能

ミュージック

ホームページで「ミュージック」をタップして音楽ライブラリに入り、再生したい音楽を選択します。

天気予報

ホームページで「天気予報」を選択すると、3日間の天気を確認できます。[°C]と[°F]の両方が利用可能です。使用したい温度形式に切り替えることができます。左上隅の「+」をタップして複数の都市を追加すると、追加した都市の天気を知ることができます。

時計

「時計」を選択すると、好きな時計のデザインを選択して時間を表示できます。
手順：時計インターフェースに入った後、画面をダブルクリックします。

アラーム

アラーム時計を設定するには、「アラーム」を選択します。「追加」をタップして新しいアラーム時計を追加し、「編集」をタップして設定した時間を調整し、選択したアラーム時計を削除します。

一般設定

「マイフレーム」

フレームの接続コードとユーザー管理を表示します。

- 接続コードとQRコードは12時間ごとに更新されます。また、このアイコン  をタップしてコードを手動で更新することもできます。
- フレームにニックネームを付けるには、右上隅のフレーム名をタップして編集します。フレームに接続した後、アプリに表示されます。
- メール経由で写真や動画をフレームに送信するには、単純に「ユーザー管理」の「+」をタップしてメールアドレスを追加します。「メール経由で写真や動画をアップロード」を詳しくはご参照ください。詳細については、「メール経由で写真をアップロード」を参照してください。
- 「ユーザー」では、フレームの接続されたアカウントを管理できます。アカウント名をタップすると、写真の表示、名前の注釈、ユーザーの削除、またはユーザーと写真の両方の削除ができます。

「アルバム設定」

• 明るさ

画面の明るさを調整します。

• 音量調整

メディアの音量を調整します。

• タッチ音

画面に触れたときに音をオンまたはオフにするかどうかを選択します。

• アシストタッチ

アシストタッチが有効になっていると、画面にアシストタッチが表示されます。これは、ホームページに簡単に移動したり、音量を調整したりするための迅速なナビゲーションキーです。

•言語

English/Deutsch/Español/Français/Italiano/Русский/日本語/簡体中文
Classic 15 Proのシステム言語を設定します。

•自動スライドショー

自動スライドショーの時間を設定して、一定時間操作がない場合に自動的にフレームが写真を表示するようにします。例えば：5秒に設定すると、5秒間操作がない場合に自動的にスライドショーに切り替わります。

•写真の表示順

写真を表示する順序を順次またはランダムモードから選択します。

•並び替え条件

時間または名前写真を並び替えるかどうかを選択します。

•説明

キャプションが有効になっている場合、書いたキャプションが写真に表示されます。

•日時

好みに応じて日付と時刻を設定します。タイムゾーンを選択し、ネットワーク提供の時間を使用できます。

•スリープ

オートオン/オフ時間を設定して、特定の時間に画面を自動的にオンとオフにします。

•画面を自動回転

画面を自動回転が有効になっている場合、フレームを縦または横に置くことができます。フレームは画像を自動的に調整します。

•通知音

新しいメッセージについて音で通知を受け取るかどうかを選択します。

•Wifi

フレームを接続するWifiを選択します。

•出荷時の設定に復元

1、「出荷時の設定に復元」をタップして、フレームをリセットします。リセットする方法は2つあります：

- ①「すべてのユーザーを削除し、デバイスを非アクティブにリセット」を選択し、デバイスファイルがリセットされ、すべてのバウンドユーザーが解除されます。
。
- ②このオプションを選択しない場合、デバイスファイルだけがデフォルト設定に戻り、バウンドされたユーザーは残ります。

2、フレームをリセットするには、OKをタップします。

•ヘルプ

写真を共有するための簡単なガイド。

•概要

「概要」をタップして、フレームのバージョン、フレームID、シリアル番号などを確認します。フレームのバージョンはトラブルシューティングに非常に役立ちます。フレームのバージョンを提供するよう求められた場合、ここで見つけることができます。

技術仕様

- アダプター：入力100-240V 50/60HZ
- 画像フォーマット：BMP、JPG、GIF、PNG
- オーディオフォーマット：Mp3、WMA、OGG、AAC、APE、FLAC、WAV
- ビデオフォーマット：MPEG1、MPEG2、MPEG4、Xvid、AVI、M-JPEG、H.264、MOV、VOB、MKV、DIVX4、DIVX5、DIVX33GP
- 外部サポート：最大32GBのUSBドライブ/TFカード
- Wifi：2.4GHz Wifiネットワーク対応

トラブルシューティング

1、フレームは常に電源を入れておく必要がありますか？

このフレームは常にDC電源に接続する必要があります。

2、なぜこのフレームがWifiに接続できないのですか？

2.4GHzのWifiネットワークをサポートしています。接続したいWifiネットワークを選択し、必要に応じて正しくパスワードを入力してください。Wifiネットワークがリストにない場合は、フレームを再起動するか、ルーターに近づけてから数秒待ってから再度確認してください。

3、このフレームは作業するためにWifiに接続する必要がありますか、それともセットアッププロセスだけですか？

このフレームは、セットアップ、新しい写真や動画の受信、ユーザーリクエスト、ソフトウェアの更新のためにWifiネットワークに接続する必要があります。それ以外の場合、Wifi接続なしで写真や動画を再生することができます。

4、フレームから音が出ないのはなぜですか？

音量が0になっていないか、プレーヤーがミュートモードになっていないかを確認してください。

5、写真や動画をフレームに共有できますか？

はい、写真と動画（最大200MBまで）をフレームに共有できます。

6、写真と動画を一緒に再生できますか？

写真と動画は別々に再生することしかできません。

7、このフレームは特定の時間に自動でオン/オフできますか？

スリープ設定に移動し、希望するオートオン/オフ時間を設定できます。

8、クラウドサーバーにビデオや写真を共有した後、ファイルがないのはなぜですか？

アップロードプロセスが完了しているかどうかを確認してください。

9、なぜこのフレームがファイルを再生できないのですか？

ファイル形式がフレームと互換性があるかどうかを確認してください。

10、画像の遷移や表示速度を変更できますか？

はい、写真が表示されている間に、下部の列で速度を調整できます。

お問い合わせ

✉ cs@dragontouch.com



www.dragontouch.com

DragonTouch 製品に関するご質問がございましたら、お気軽にメールでお問い合わせいただくか、QRコードをスキャンしてフォローしてください。